# Programmable Multi-Axis Controller CK3M-series CPU Unit CK3N-CPU1 1

CSM\_CK3M-CPU1\_1\_DS\_E\_DITA\_3\_5

## Multi-axis control with a fastest servo cycle time of 50 µs/5 axes enables precision machining



СКЗМ-СРU1□1

### Features

- Up to 16 axes can be controlled by analog commands using four CK3W-AX
- The CK3M-CPU121 controls up to eight EtherCAT servo drives
- G-Code/ANSI C/original programming language
- EtherCAT slaves including vision and I/O can be connected
- Compact design (1/3 the size of conventional models\*1)
- The EtherCAT network reduces wiring and machine size
- \*1. Compared with UMAC from OMRON's Delta Tau Data Systems, Inc.


EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

Other company names and product names in this document are the trademarks or registered trademarks of their respective companies. The product photographs and figures that are used in this catalog may vary somewhat from the actual products.

PMAC is an abbreviation for Programmable Multi Axis Controller.

### **System Configurations**

### **Basic System Configuration**

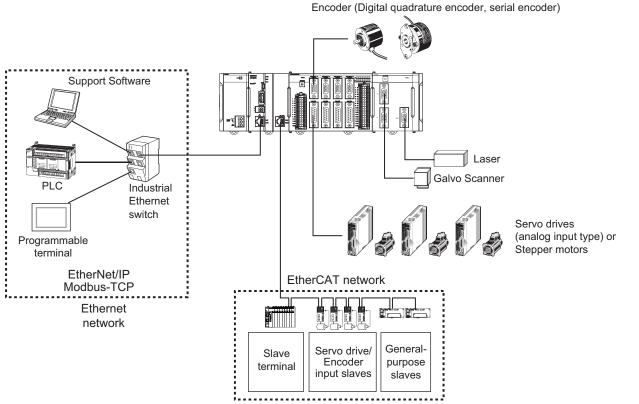

\*1. You will need this unit when you use the Galvo Scanner.

### CK3W Unit Configuration (CPU Rack/Expansion Rack)

The following shows the configuration of CK3W Units.

#### **CPU Rack**

The CK3W Unit configuration in the CPU Rack consists of a Power Supply Unit, CPU Unit, CK3W-AX Unit, CK3W-MD Unit, CK3W-AD Unit, CK3W-ECS Unit, CK3W-GC Unit and End Cover.

Up to four CK3W Units (or up to two CK3W-AX Units) can be connected to the CPU Unit.

#### **Expansion Rack**


One Expansion Rack can be connected per CPU Unit.

To connect an Expansion Rack, use the Expansion Master Unit (CK3W-EXM01) and Expansion Slave Unit (CK3W-EXS02).

Up to four CK3W Units (or up to two CK3W-AX Units) can be installed to the Expansion Rack.

Connect the Expansion Master Unit (CK3W-EXM01) adjacent to the right side of the CPU Unit. Connect the Expansion Slave Unit (CK3W-EXS02) adjacent to the right side of the Power Supply Unit.


Unless the Expansion Master Unit (CK3W-EXM01) is connected adjacent to the right side of the CPU Unit, the Sys.Status register CK3WConfigErr becomes "5".

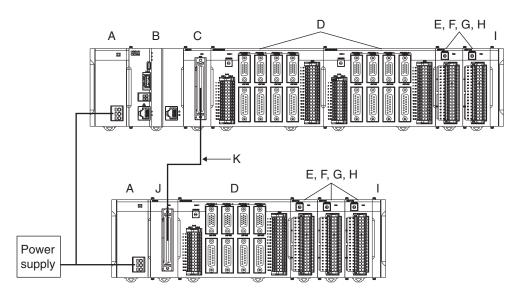

Letter	Configuration	Remarks
А	Power Supply Unit	Input the 24 V power source. Always wire the CPU Rack and Expansion Rack to the same power supply.
В	CK3M-series CPU Unit	This is the Unit at the center of the motion control, which executes the motion program.
С	CK3W-EXM01	Expansion Master Unit. Connect this Unit adjacent to the right side of the CPU Unit in the Expansion Rack.
D	CK3W-AX Unit	Axis Interface Unit. For axis control, connect this to a Servo Drive and encoder.
E	CK3W-MD Unit	Digital I/O Unit. You can add 16 digital inputs and 16 digital outputs.
F	CK3W-AD Unit	Analog Input Unit. You can add 4 or 8 voltage inputs.
G	CK3W-ECS Unit	Encoder Input Unit. You can connect four channels of the serial encoder.
н	CK3W-GC Unit	Laser Interface Unit. You can connect the Galvo Scanner compatible with the interface of XY2-100 or SL2-100.
I	End Cover	Must be connected to the right end of the CPU Rack and Expansion Rack. The CPU Unit and the Expansion Slave Unit are each provided with one End Cover.
J	CK3W-EXS02	Expansion Slave Unit. Use this in the Expansion Rack. Connect this Unit adjacent to the right side of the Power Supply Unit.
к	Expansion cable	Use this cable to connect the Expansion Master Unit and the Expansion Slave Unit. The cable length is 30 cm. Be sure to use the CK3W-CAX003A (30 cm) cable.


### **EtherCAT Network Configuration**

The EtherCAT network configuration consists of a Power Supply Unit, CPU Unit, End Cover, and EtherCAT slaves. Use the built-in EtherCAT port on the CK3M-series CPU Unit to connect EtherCAT slaves.

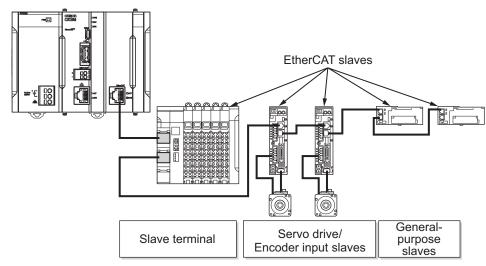

EtherCAT is synchronized with the servo cycle of the CK3M-series CPU Unit. This enables acquisition of the I/O data of slave terminals that are synchronized with the servo cycle.

Refer to the CK3M-series Programmable Multi-Axis Controller User's Manual Hardware (Cat.No.O036) for information on using the NX-series EtherCAT Coupler Unit.

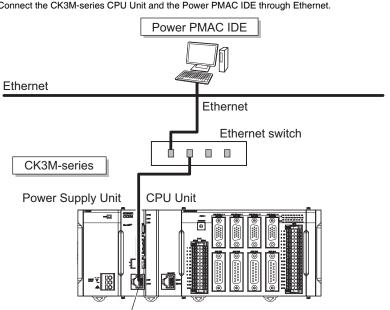


### **Network Configuration** Connecting to the Power PMAC IDE

Connect the CK3M-series CPU Unit and the Power PMAC IDE through Ethernet.

Built-in EtherNet/IP port

### **Ethernet Network Configuration**

The Ethernet communications port on the CK3M-series CPU Unit supports the Modbus-TCP protocol. It can be connected to devices such as PLCs and programmable terminals that support the Modbus-TCP protocol.

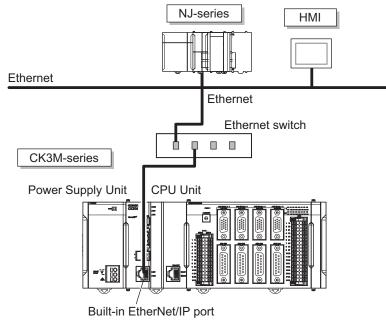

### **Ordering Information**

### **CK3M CPU Unit**

The models and outline of specifications are given below.

Product name	Memory capacity	Port	Max. no. of controlled axes at EtherCAT port	Model
	RAM: 1 GB Built-In flash memory: 1 GB	EtherNet/IP: 1 port EtherCAT: None	-	CK3M-CPU101
CPU Unit <sup>*1</sup>		EtherNet/IP: 1 port EtherCAT: 1 port (DC sync)	4	CK3M-CPU111
		EtherNet/IP: 1 port EtherCAT: 1 port (DC sync)	8	CK3M-CPU121

\*1. One CK3W-TER11 End Cover is provided with the CK3M-CPU1 1 CPU Unit.

#### Support Software

The following table shows the Support Software used to configure, monitor, program, and debug the Motion Controller.

Configuration software		Application	How to Procure
Power PMAC IDE <sup>11</sup>		This computer software is used to configure the Motion Controller, create user programs, and debug the programs.	This is free software. <sup>2</sup>
Power PMAC-NC	Power PMAC-NC SDK	This computer software is used to control working machines and other CNC machines with the Motion Controller. Use this software to customize HMI screens. The product contains extension source codes for customization.	This is non-free software. *2
	Power PMAC-NC Runtime	This computer software is used to control working machines and other CNC machines with the Motion Controller. Use this software when you do not customize HMI screens.	This is non-free software. *2

\*1. Refer to Version Information->Page 12 for the supported Power PMAC IDE versions.

\*2. Contact your OMRON representative for information on how to procure.

Power Supply Units The models and outline of specifications are given below.

Product name	Specifications	Model
Power Supply Unit	Rated output voltage: 5 VDC/24 VDC Maximum output power: 5 VDC 23 W, 24 VDC 55 W	CK3W-PD048

#### **Axial Interface Units**

The models and outline of specifications are given below.

Product name	Amplifier interface	Encoder interface	Output type	Model
	DirectPWM output		NPN type	CK3W-AX1313N
	DA output (Filtered PWM)	Digital quadrature encoder/serial encoder		CK3W-AX1414N
	DA output (True DAC)			CK3W-AX1515N
Axis Interface Unit	DirectPWM output	Sinusoidal encoder/serial encoder		CK3W-AX2323N
Axis intenace Unit	DirectPWM output	Digital quadrature encoder/serial encoder	PNP type	CK3W-AX1313P
	DA output (Filtered PWM)			CK3W-AX1414P
	DA output (True DAC)			CK3W-AX1515P
	DirectPWM output	Sinusoidal encoder/serial encoder	1	CK3W-AX2323P

### **Digital I/O Units**

Product name	Number of inputs	Number of outputs	I/O type	Model
	10	16	NPN	CK3W-MD7110
Digital I/O Unit	16		PNP	CK3W-MD7120

### **Analog Input Units**

Product name	Input range	Number of inputs	Model
Analog Input Unit	t -10 to 10 V	4	CK3W-AD2100
Analog input onit	-10 10 10 V	8 CK3W-AD3100	CK3W-AD3100

#### **Encoder Input Unit**

Product name	Encoder type	Number of inputs	Protocol	Model
Encoder Input Unit	Serial encoder	4 channels	BiSS-C, Endat2.2, and R88M-1L□/-1M□ Motor built-in encoder	CK3W-ECS300

### Laser Interface Unit

Product name	Communications method	Laser output	Model
	XY2-100	PWM output	CK3W-GC1100
Laser Interface Unit	X12-100	PWM output, TCR output	CK3W-GC1200
	SL2-100	PWM output	CK3W-GC2100
	SL2-100	PWM output, TCR output	CK3W-GC2200

### **Expansion Master Units and Expansion Slave Units**

Product name	Description	Model
Expansion Master Unit	Connect the Expansion Master Unit adjacent to the right side of the CPU unit	CK3W-EXM01
Expansion Slave Unit *1	Connect the Expansion Slave Unit adjacent to the right side of the power supply unit	CK3W-EXS02
Expansion Cable	For connection between the Expansion Master Unit and the Expansion Slave Unit (0.3 m)	CK3W-CAX003A

1. One CK3W-TER11 End Cover is provided with the CK3W-EXS02 Expansion Slave Unit.

EtherCAT Coupler Units You can use NX Units via the EtherCAT Coupler Unit that is connected to the built-in EtherCAT port on the CPU Unit.

Product name	Communications cycle in DC Mode	Current consumption	Max. I/O power supply current	Model
EtherCAT Coupler Unit *1				
	125 to 10,000 μs <sup>°2</sup>	1.25 W max.	10 A	NX-ECC203

\*1. One NX-END01 End Cover is provided with the EtherCAT Coupler Unit.\*2. This depends on the specifications of the EtherCAT master.

### **Switching Hubs**

Product name	Specification	Manufacturer	Model
	5 ports. Current consumption: 0.07 A Power supply connector included	OMRON Corporation	W4S1-05D
Industrial Switching Hub	Contact the manufacturer.	Cisco Systems, Inc.	-
	Contact the manufacturer.	CONTEC Co., Ltd.	-
	Contact the manufacturer.	PHOENIX CONTACT	-

### **Recommended EtherCAT and Ethernet Communications Cables**

Use a straight STP (shielded twisted-pair) cable of category 5 or higher with double shielding (aluminum tape and braiding) for EtherCAT. Use an STP (shielded twistedpair) cable of category 5 or higher for Ethernet. Products for Ethernet 100BASE-TX described in the table below can be used for both 100BASE-TX and 10BASE-T.

### **Cable with Connectors**

#### Cables with Connectors (For EtherCAT only)

Item	Appearance	Recommended manufacturer	Cable length (m)	Model
Cable with Connectors on Both Ends		OMRON	0.3	XS6W-6LSZH8SS30CM-Y
(RJ45/RJ45)	ar O		0.5	XS6W-6LSZH8SS50CM-Y
Standard RJ45 plugs <sup>*1</sup> Wire gauge and number of pairs:			1	XS6W-6LSZH8SS100CM-Y
AWG26, 4-pair cable			2	XS6W-6LSZH8SS200CM-Y
Cable sheath material: LSZH <sup>*2</sup>			3	XS6W-6LSZH8SS300CM-Y
Cable color: Yellow *3			5	XS6W-6LSZH8SS500CM-Y
			0.3	XS5W-T421-AMD-K
Cable with Connectors on Both Ends	10000		0.5	XS5W-T421-BMD-K
(RJ45/RJ45) Rugged RJ45 plugs <sup>*1</sup>	15	OMRON	1	XS5W-T421-CMD-K
Wire gauge and number of pairs:	*0		2	XS5W-T421-DMD-K
AWG22, 2-pair cable Cable color: Light blue			5	XS5W-T421-GMD-K
			10	XS5W-T421-JMD-K
Cable with Connectors on Both Ends	-0-	OMRON	0.5	XS5W-T421-BM2-SS
(M12 Straight/M12 Straight)			1	XS5W-T421-CM2-SS
Shield strengthening connector cable *4			2	XS5W-T421-DM2-SS
M12/Smartclick connectors Wire gauge and number of pairs:			3	XS5W-T421-EM2-SS
AWG22, 2-pair cable			5	XS5W-T421-GM2-SS
Cable color: Black			10	XS5W-T421-JM2-SS
Cable with Connectors on Both Ends			0.5	XS5W-T421-BMC-SS
(M12 Straight/RJ45)			1	XS5W-T421-CMC-SS
Shield strengthening connector cable *4 M12/Smartclick connector and	15		2	XS5W-T421-DMC-SS
rugged RJ45 plug	-0	OMRON	3	XS5W-T421-EMC-SS
Wire gauge and number of pairs: AWG22, 2-pair cable			5	XS5W-T421-GMC-SS
Cable color: Black			10	XS5W-T421-JMC-SS

\*1. Cables with standard RJ45 plugs are available in the following lengths: 0.2 m, 0.3 m, 0.5 m, 1 m, 1.5 m, 2 m, 3 m, 5 m, 7.5 m, 10 m, 15 m, 20 m. Cables with rugged RJ45 plugs are available in the following lengths: 0.3 m, 0.5 m, 1 m, 2 m, 3 m, 5 m, 10 m, 15 m. For details, refer to the *Industrial Ethernet Connectors Catalog* (Cat. No. G019).

\*2. The lineup features Low Smoke Zero Halogen cables for in-cabinet use and PUR cables for out-of-cabinet use. Although the LSZH cable is single shielded, its communications and noise characteristics meet the standards.

\*3. Cables colors are available in yellow, green, and blue.

\*4. For details, contact your OMRON representative.

### **Cables/Connectors**

Product name			Recommended manufacturer	Model
	Wire gouge and pum		Hitachi Cable, Ltd.	NETSTAR-C5E SAB 0.5 x 4P CP <sup>11</sup>
oducts for EtherCAT or Ethernet	Wire gauge and num- ber of pairs: AWG24, 4-pair cable	Cable	Kuramo Electric Co.	KETH-SB *1
(1000BASE-T/100BASE-TX)			JMACS Japan Co., Ltd.	IETP-SB <sup>*1</sup>
		RJ45 Connector	Panduit Corporation	MPS588-C *1
		Cable	Kuramo Electric Co.	KETH-PSB-OMR *2
			JMACS Japan Co., Ltd.	PNET/B *2
Products for EtherCAT or Ethernet 100BASE-TX)	Wire gauge and num- ber of pairs: AWG22, 2-pair cable	RJ45 Assembly Connector	OMRON Corporation	XS6G-T421-1 <sup>-2</sup>

\*1. We recommend you to use the Cable for EtherCAT or Ethernet marked with \*1 and the RJ45 Connector marked with \*1 together. \*2. We recommend you to use the Cable for EtherCAT or Ethernet marked with \*2 and the RJ45 Assembly Connector marked with \*2 together. Note: Connect both ends of cable shielded wires to the connector hoods.

### **Optional Products/Maintenance Products/DIN Track Accessories**

Product name		Model
EtherCAT Junction Slave *1	3 ports. Power supply voltage: 20.4 to 28.8 VDC (24 VDC -15 to +20%). Current consumption: 0.08 A	GX-JC03
	6 ports. Power supply voltage: 20.4 to 28.8 VDC (24 VDC -15 to +20%). Current consumption: 0.17 A	GX-JC06
	OMRON USB Flash Drive (2 GB)	FZ-MEM2G
USB Flash Drive	OMRON USB Flash Drive (8 GB)	FZ-MEM8G
End Cover *2 (for CK3M-CPU1 1 CPU Unit)	Must be connected to the right end of the CPU rack and expansion rack. The CPU unit and the expansion slave unit are each provided with one end cover.	CK3W-TER11
	Length: 0.5 m. Height: 7.3 mm	PFP-50N
DIN Track	Length: 1 m. Height: 7.3 mm	PFP-100N
	Length: 1 m. Height: 16 mm	PFP-100N2
End Plate	Stopper to prevent units from moving on the DIN track. The minimum order quantity is 10 units.	PFP-M

\*1. EtherCAT junction slaves cannot be used for EtherNet/IP and Ethernet.
\*2. Use the CK3W-TER11 End Cover only for the CK3M-CPU1□1 CPU Unit or CK3W-EXS02 Expansion Slave Unit.

## **General Specifications**

This section describes the Motion Controller specifications.

Item Enclosure Grounding Method		Specification Mounted in a panel	
			Ambient Operating Temperature
	Ambient Operating Humidity	10% to 95% (with no condensation or icing)	
	Atmosphere	Must be free of corrosive gases.	
	Ambient Storage Temperature	-25 to 70°C (with no condensation or icing)	
Operating Environment	Vibration Resistance	Conforms to IEC 60068-2-6. 5 to 8.4 Hz with 3.5-mm amplitude, 8.4 to 150 Hz, acceleration of 9.8 m/s <sup>2</sup> 100 min each in X, Y, and Z directions (10 sweeps of 10 min each = 100 min total)	
	Shock Resistance	Conforms to IEC 60068-2-27. 147 m/s <sup>2</sup> , 3 times each in X, Y, and Z directions	
Insulation Resistance		20 M $\Omega$ min. between isolated circuits (at 100 VDC)	
Dielectric Strength		510 VAC between isolated circuits for 1 minute with a leakage current of 5 mA max.	
Applicable Standards		cULus, EU: EN 61326, RCM, KC, EAC	

### **Performance Specifications**

The performance s	pecifications are shown be	low.				
Item		CK3M-CPU101	CK3M-CPU111	CK3M-CPU121		
Memory		Main memory: 1 GB Built-In Flash Memory: 1 GB				
Number of connectable CK3W Units (when using Expansion Rack)		8 Units max. Or 4 CK3W-AX Units max.				
		No EtherCAT	For EtherCAT communications RJ45 $\times$ 1 (Shield supported)			
External connection	on terminals		For Ethernet communications RJ45 × 1 (Shield supported)			
		USB port For external memory connect				
		Maximum number of controlled axes	16 axes (when using four CK	16 axes (when using four CK3W-AX Units)		
Motion control	Control method		Speed and torque control using analog output Stepper motor control using pulse output Commutation control using DirectPWM output			
	EtherCAT	Maximum number of controlled axes	None 4	4 axes	8 axes	
		Control method		Issuing control commands using EtherCAT		
	Communications protoco			EtherCAT protocol		
	Baud rate			100 Mbps		
	Physical layer			100BASE-TX (IEEE 802.3)		
EtherCAT	Topology			Line, daisy chain, and branching		
communications specifications Transmission media Transmission distance			None	Twisted-pair cable of category 5 or higher (doubleshielded cable with aluminum tape and braiding)		
				Distance between nodes: 100 m or less		
Maximum number of slaves			32			
Range of node addresses that can be set		1 to 32				
Baud rate		100 Mbps				
Physical layer		100BASE-TX (IEEE 802.3)				
Frame length		1,514 bytes max.				
Media access method		CSMA/CD				
Modulation		Baseband				
Topology		Star				
	Transmission media		Twisted-pair cable of category	y 5, 5e, or higher (shielded cab	le) *1	
Ethernet	Maximum transmission d Ethernet switch and node		100 m			
communications specifications	Maximum number of case	cade connections	There are no restrictions if an	Ethernet switch is used.		
		Number of connections	32			
	EtherNet/IP tag data link	Requested packet interval (RPI)	1 to 1,000 ms (0.5 ms units)			
	(cyclic communications)	Allowed communications bandwidth per Unit	3,200 pps *3 Input: 504 bytes max. Output: 504 bytes max.			
		IO connection size				
EtherNet/IP CIP message service *2		UCMM (unconnected message)	Number of servers that can p	erform communications simulta	aneously: 32	
EtherNet/IP conformance test		CT17 comoliant				
USB port	Physical layer		USB 2.0 compliant, type A connector. Output voltage: 5 V, 0.5 A max.			
USB port	Transmission distance		3 m max.			
Current consumpt	ion		CK3M-CPU101: 5 VDC 7.2 W max. CK3M-CPU111/CPU121: 5 VDC 7.8 W max. (including End Cover)			
Dimensions (heigh	$ht \times depth \times width)$		90(H)/80(D)/63.2(W)			
Weight (including	End Cover)		220 g max.	230 g max.		


\*1. Always use shielded cables for EtherNeUIP communications.


\*2. EtherNet/IP is available only for targets and not available for originators. EtherNet/IP is available only for CPU Units with PMAC firmware revision version 2.6.0 or later whose date of production is September 8th, 2020 or later (Lot number 08920 and later). Use Power PMAC IDE Ver.4.4.1 or a later version.

\*3. Represents Packet Per Second and indicates the number of sent or received packets that can be processed in a second.

## **Part Names and Functions**

### **CPU Unit**

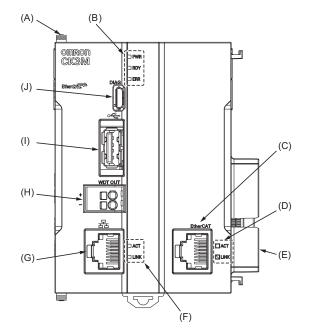

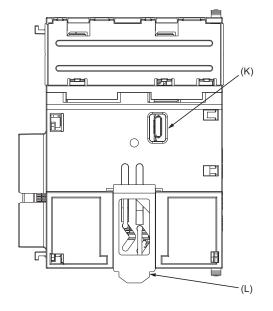

Letter	Name	Function
А	Slider	Holds the Units together.
В	B CPU Unit operation indicators Shows the operation status of the CPU Unit using multiple indicators	
С	EtherCAT communications connector Connects to an EtherCAT network communications cable.	
D	D EtherCAT communications port operation indicators Shows the operation status of EtherCAT.	
Е	E Unit connector Connector that connects to the Unit.	
F	F Ethernet communications port operation indicators Shows the operation status of Ethernet.	
G	Ethernet communications connector Connects to an Ethernet network communications cable.	
Н	H Watchdog output terminal block Normally in ON state, and switches to OFF when watchdog	
I USB 2.0 connector USB 2.0 interface connector. Connects the USB memory.		
J	USB connector for maintenance Do not use.	
К	USB connector for maintenance	Do not use.
L	DIN Track mounting hook Used to mount the Unit to a DIN Track.	

### **Version Information**

### CK3W Units and Supported Versions of CPU Units and Power PMAC IDE

This section provides version information that you need to know when connecting a CK3W Unit to a CPU Unit and PowerPMAC IDE. The table below specifies the correspondence between each CK3W Unit and the versions of CPU Unit and Power PMAC IDE.

Be sure to use the version combinations listed in the table below.

CK3W Unit	Supported version		
CK3W Unit	CPU Unit's PMAC firmware revision	Power PMAC IDE version	
CK3W-AX1414□/-AX1515□	All versions supported	Ver. 4.2 or later	
CK3W-AX1313□/-AX2323□	Ver. 2.5.2 or later	Ver. 4.3 or later	
CK3W-MD7110/-MD7120	Ver. 2.5.2 or later	Ver. 4.3 or later	
CK3W-AD2100/-AD3100	Ver. 2.5.2 or later	Ver. 4.3 or later	
CK3W-EXM01/-EXS02	Ver. 2.5.2 or later	Ver. 4.3 or later	
CK3W-ECS300	Ver.2.6.1 or later	Ver.4.5 or later	
CK3W-GC1100 CK3W-GC1200 CK3W-GC2100 CK3W-GC2200	Ver.2.6.1 or later	Ver.4.5 or later	

### **Restrictions on Using the NX-series EtherCAT Coupler Unit**

When OMRON NX-series EtherCAT Coupler Units are used as slaves with the CPU Unit as the EtherCAT master, the following models and unit versions of EtherCAT Coupler Units can be connected.


Model	Unit version	Connectable/Unconnectable
NX-ECC203	Ver.1.4 or later	Connectable
NX-L00203	Ver.1.3 or earlier	
NX-ECC202	All versions	Unconnectable
NX-ECC201	All versions	


### Programmable Multi-Axis Controller CK3M-series CPU Unit


(Unit: mm)

### Dimensions


### **CPU Unit**

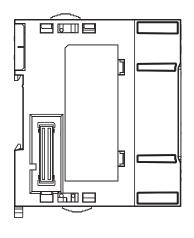


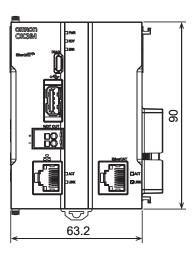


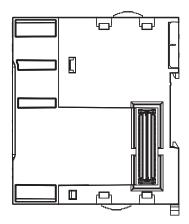


**End Cover** 



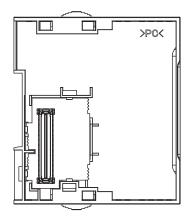



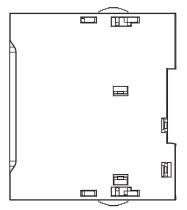

Model	Unit width (mm)
CK3W-PD048	45
CPU Unit Model	Unit width (mm)
CK3M-CPU101	
CK3M-CPU111	63.2

#### and Cover

Model	Unit width (mm)
CK3W-TER11	15.6

### **Axis Interface Unit**

Model	Unit width (mm)
CK3W-AX1313N	
CK3W-AX1414N	
CK3W-AX1515N	
CK3W-AX2323N	120
CK3W-AX1313P	130
CK3W-AX1414P	
CK3W-AX1515P	
CK3W-AX2323P	

### Digital I/O Unit, Analog Input Unit, Expansion Master Unit, and Expansion Slave Unit


	Model	Unit width (mm)
CK3W-MD7110		
CK3W-MD7120		
CK3W-AD2100		31.6
CK3W-AD3100		31.0
CK3W-EXM01		
CK3W-EXS02		

### Encoder Input Unit / Laser Interface Unit

	Model	Unit width (mm)
CK3W-ECS300		
CK3W-GC1100		
CK3W-GC1200		63.2
CK3W-GC2100		
CK3W-GC2200		

### **Design Example for Width W**

CPU Unit Power Supply Unit Expansion Master Unit **Configuration Units** 

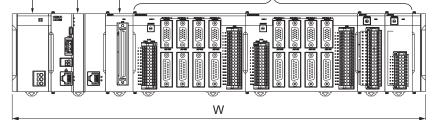


Name	Model	Unit width (mm)	Qty	Subtotal unit width (mm)
Power Supply Unit	CK3W-PD048	45	1	45
CPU Unit	CK3M-CPU101	63.2	1	63.2
Expansion Master Unit	CK3W-EXM01	31.6	1	31.6
Axis Interface Unit	CK3W-AX1414N	130	2	260
Digital I/O Unit	CK3W-MD7110	31.6	1	31.6
Analog Input Unit	CK3W-AD2100	31.6	1	31.6
End Cover	CK3W-TER11	15.6	1	15.6
Total W = 45 + 63.2 + 31.6 + 130 × 2 + 31.6 +	478.6			

14

### **Installation Dimensions**


### Installation Dimensions

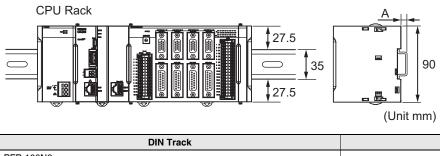


DIN Track	A (mm)
PFP-100N2	16
PFP-100N	7.3
PFP-50N	7.3

## **Installation Height**


### For CK3M-series CPU Unit

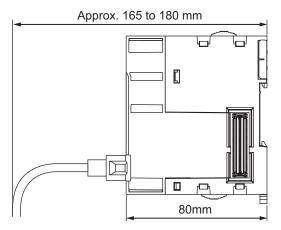


### For CK3W-AX Unit

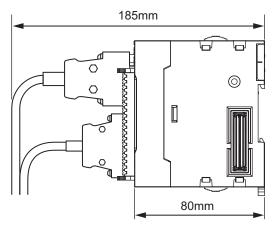


### For CK3W-MD Unit

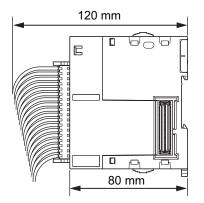


### For CK3W-AD Unit

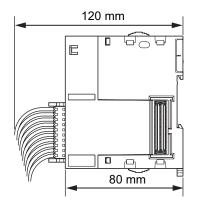


### For CK3W-ECS Unit

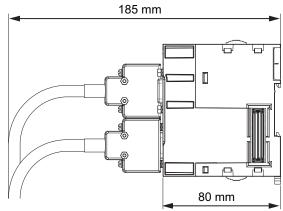

For CK3W-GC Unit

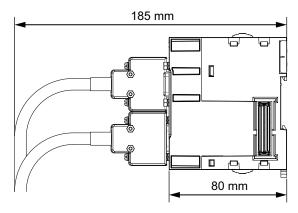

### For CK3W-EXM01 and CK3W-EXS02

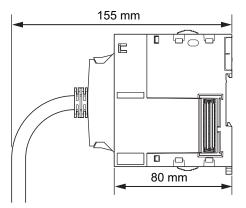

## **Related Manuals**

The following manuals are related. Use these manuals for reference. Contact your OMRON representative for information on how to procure these manuals.

Manual name	Cat. No.	Application	Description
CK3M-series Programmable Multi-Axis Controller Hardware User's Manual	O036	Learning the basic specifications of the CK3M- series Programmable Multi- Axis Controller, including introductory information, design, installation, and maintenance. Mainly hardware information is provided.	An introduction to the entire CK3M-series system is provided along with the following information. • Features and system configuration • Introduction • Part names and functions • General specifications • Installation and wiring • Maintenance and inspection
Power PMAC User's Manual	O014	Learning the features and usage examples of the CK3M- series Programmable Multi- Axis Controller.	The following information is provided on the CK3M-series Programmable Multi-Axis Controller. • Basic functions • Setup examples • Programming examples
Power PMAC Software Reference Manual	O015	Learning how to program a CK3M-series Programmable Multi-Axis Controller.	The following information is provided on the CK3M-series Programmable Multi-Axis Controller. • Details of commands • Details of data structure
Power PMAC IDE User Manual	O016	Learning how to operate Power PMAC IDE, the integrated development environment of the Controller.	Describes the operating procedures of Power PMAC IDE, and examples of how to start the system.
Power PMAC-NC Quick Start Manual	O017	Briefly understanding the basic usage of Power PMAC-NC.	Describes the Quick setup procedure to run Power PMAC-NC on a desktop PC by showing some examples.
Power PMAC-NC .ini Configuration Manual	O018	Configuring an application for CNC devices by using Power PMAC-NC.	Describes how to set up <i>PowerPmacNC.ini</i> , the setup data file to be loaded when Power PMAC-NC starts.
Power PMAC-NC Software User Manual	O019	Learning about usage and features of Power PMAC-NC, Support Software required to use the Controller for CNC devices.	The following information is provided on Power PMAC-NC. • How to use the software • Features included in the software • Features that can be customized
Power PMAC-NC Mill G-Code Manual	O020	Creating programs for CNC devices by using Power PMAC-NC.	Describes the basic G-code set that can be used for Power PMAC- NC, and relevant instructions.

### Terms and Conditions Agreement

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

(a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

(b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warrantv.

See http://www.omron.com/global/ or contact your Omron representative for published information.

#### Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

#### Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

#### Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

#### Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions. Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

2022.3

In the interest of product improvement, specifications are subject to change without notice.

**OMRON** Corporation Industrial Automation Company

http://www.ia.omron.com/